


Continental

SHOP-IN-A-BOX

LED Light Installation Instructions

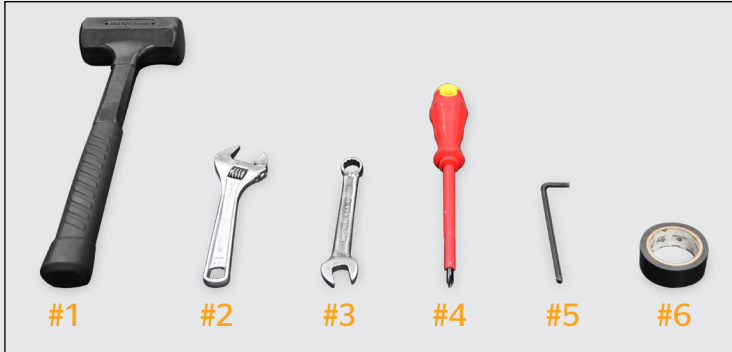

Tools Needed For Installation

Tools needed for installation: #1 Rubber mallet, #2 Adjustable wrench, #3 1/2" wrench, #4 Phillips screwdriver, #5 Allen wrench 5/32", #6 Electrical tape.




Hardware Included

Hardware Included: #1 (2) Trim caps, #2 (2) 5/16-18 Bolts, #3 (2) Nuts if needed, #4 (4) 1/4-20 Button head screws.



Picture # 1

Note: Keep the green plastic band to be used in step # 5.

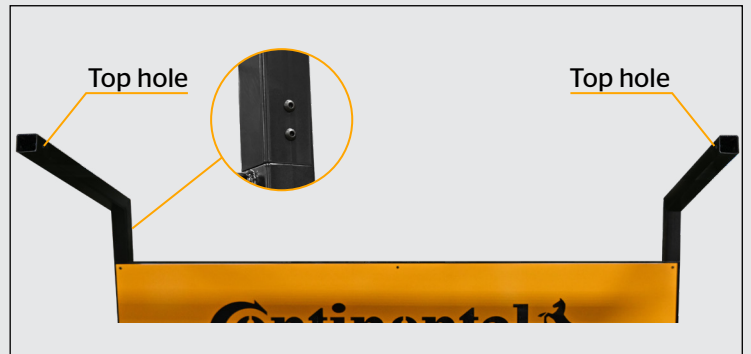

Picture # 2

Step 1: Locate the LED light box and the light support brackets, as shown in the picture # 1 marked with arrows.

Note: Cut the green plastic bands, and keep one to be used in step # 5.


Install the light support brackets onto the uprights and make sure the top holes face inside as shown in pictures # 2, and use the four supplied 1/4-20 button head screws to secure the light support brackets.



Picture # 3




Picture # 4

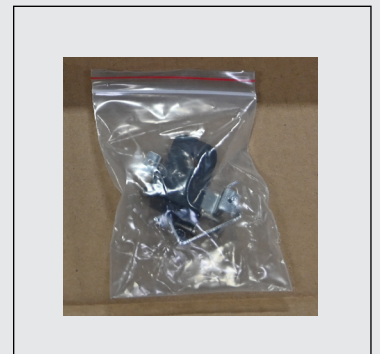


Picture # 5

Step 2: Unbox the LED light, there are 3 bags with hardware as shown in picture # 3, discard the two bags with the wire cables as shown in picture # 4 and only keep the bag with the mounting brackets, bolts, and nuts as shown in the picture # 5.

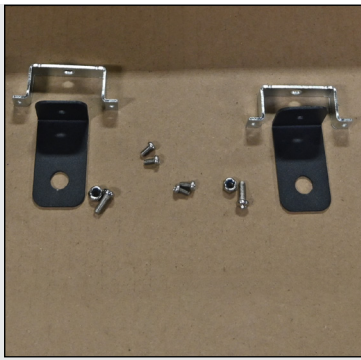


Picture # 6

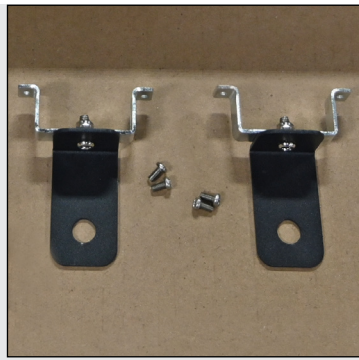

Picture # 7




Picture # 8

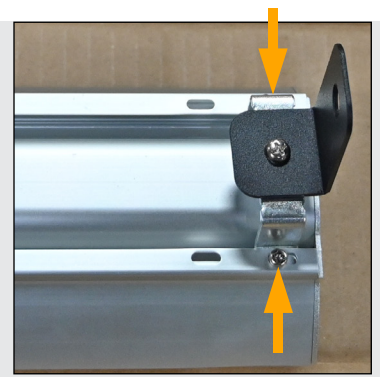


Picture # 9


Step 3: Take the mounting brackets, bolts, and nuts out of the bag as shown in the picture # 6, and then assemble the mounting brackets as shown in the picture # 7. On the right side of the LED light (close to the power cord) install the mounting bracket and secure it with the bolts in the second slot as shown in the picture # 8. **Note:** Keep the bolts loose for right now. Repeat the same process on the other side of the LED light as shown in the picture # 9. **Note:** Keep the bolts loose for right now.

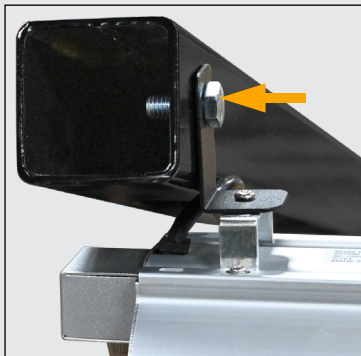

Picture # 10

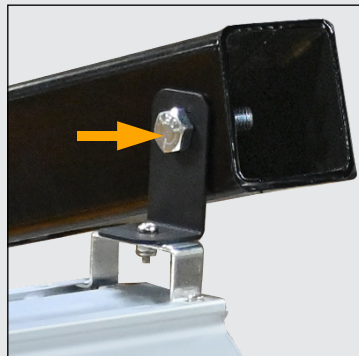

Picture # 11

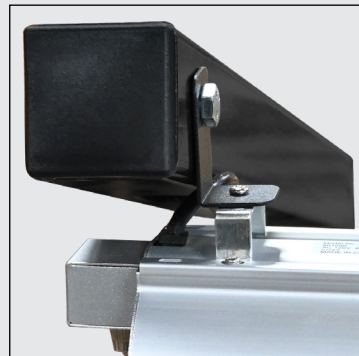


Picture # 12



Picture # 13


Step 4: Install the LED light onto the light support bracket and use the supplied 5/16 screw and nut if needed to secure it as shown in picture # 10, repeat the same process on the other side as shown in picture # 11. Then install the supplied trim caps in both light arm brackets as shown in the pictures # 12 and # 13. **Note:** Use a rubber mallet to tap on the trim cap to insert it. **Note:** Make any adjustments to the LED light if needed, and then fully tighten all the screws.

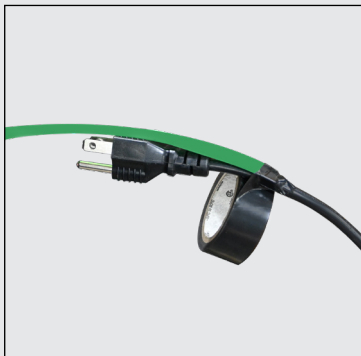

Picture # 14



Picture # 15

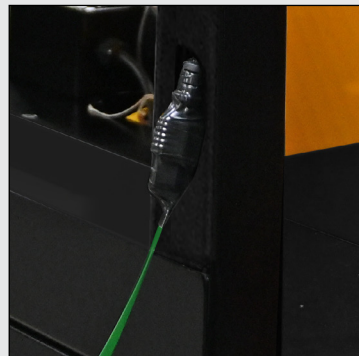

Picture # 16



Picture # 17

Step 5: Use the green plastic band and tape it to the end of the power cord as shown in the picture # 14. Fish the plastic green band through the hole located in the light support bracket as shown in the picture # 15. Gently pull the plastic green band through the light support bracket until the power cord end comes out as shown in the picture # 16. Remove the tape and the green plastic band, gently pull completely the power cord and plug it into the power strip as shown in the picture # 17.

FHS - Fluid Handling Solution

Market segment

Hydraulic Hose

Contact

Continental

703 S. Cleveland Massillon Road

Fairlawn, OH 44333-3023 U.S.A.

1-800-235-4632

www.continental-industry.com

Your local contact

www.contitech.de/contactlocator

Canada

1-888-275-4397

Mexico

1-800-439-7373